

# BilgMon 488

## How to find the serial numbers

When ordering a new Master unit or a new Sensor unit it is important to quote the old unit's serial number to ensure that the new unit is a compatible version (voltage, alignment, etc.).

The **Master unit** serial number is marked on the top of the Master unit in one of the following formats:  
A\*\*\*\*, AE\*\*\*\*, BFA\*\*\*\*, EDA\*\*\*\*, 4A\*\*\*\*,  
4AE\*\*\*\*, 4BFA\*\*\*\*, or 4EDA\*\*\*\*

The **Sensor unit** serial number is marked on the front of the Sensor unit in one of the following formats:  
B\*\*\*\*, 1B\*\*\*\*, BFB\*\*\*\*, or EDB\*\*\*\*



If the serial numbers have been worn off or painted over, you can also find them in the Master unit's memory. When the separator is not operating (the green active/power light is permanently lit, not flashing), go to the info menu as described in the Instruction Manual.